


Placement Holder for Stylus




- The placement holder for the stylus is designed to keep the stylus at the same angle the screen is currently aligned. The following notes describe how to align the placement holder to allow the stylus to be parallel to the screen.

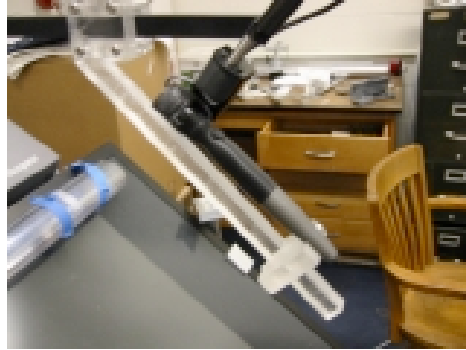

-To align the placement holder to the screen, first you must get the current angle of the screen. Use the angle-measuring device attached to the machine and place it on the right-hand edge of the screen as illustrated. Record this number.



- The stylus has very little room to accurately measure the angle. The best surface is using the flat end of the stylus. Use the angle-measuring device as done before to acquire the angle as illustrated.

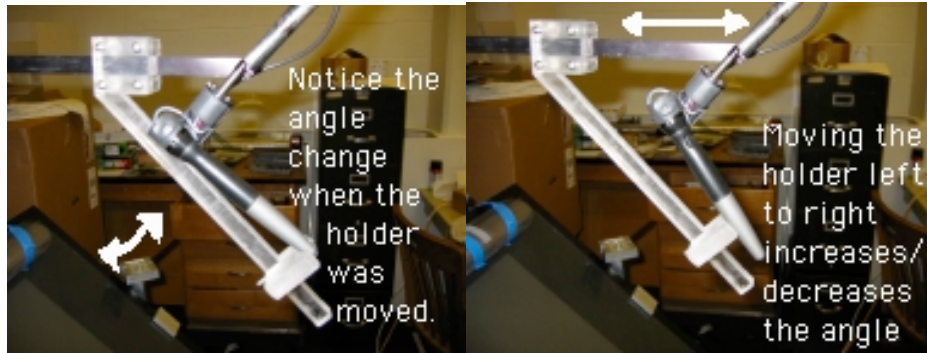

- Move the placement holder left or right until the previously recorded value is achieved. You are now done making the placement holder parallel to the screen

-IN CASE OF BREAKING PARTS □



- The two main components of the placement holder are the long bar and the smaller block. In case either of these breaks during operation, a replacement of each can be found in the upper drawer to the right of the Immersadesk.



- The replacement long bar might not be adjusted properly to the C-block that holds the placement holder to the machine. In this case, rotate the C-block until it fits accurately. It can fit accurately if rotated to the proper alignment.